



OPERATOR'S MANUAL



***High Performance Upgrade Kits
For JD Combines***

Installation Checklist

- **OEM Concaves Removal** (*read through full instructions before beginning*)
- **Auger Bed Bearing Support Changed**
- **Calmer Concaves Installed**
- **Level Concaves**
- **Calmer High Performance Combine Upgrade Kit Operating Instructions**
- **Troubleshooting**


Removing Your OEM Concaves

1. From the cab, set concave clearance to 0.

2. Remove all 3 lock pins on RH side of concave.
(image A)




3. Remove the mounting bolts on the LH side of concave
#2 and #3 and remove both concaves.(image B)

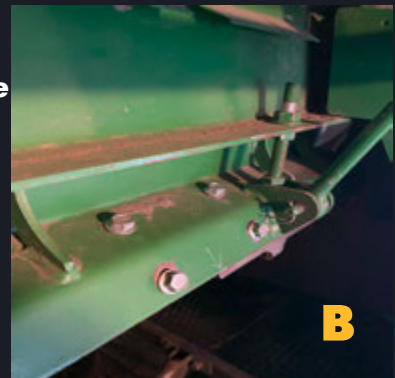

Before Installing Your Calmer Concaves

4. Remove rear auger bed bearing support.

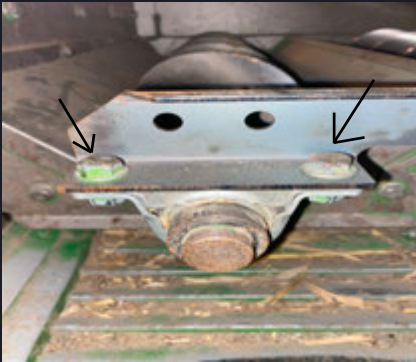

*** If you are installing concaves on a small diameter rotor, proceed to page 4**

a. Each of the 4 auger bearing mounts must be removed. (8 bolts)



b. Each of the 2 auger bearing support upper mounting bolts must be removed. (4 bolts)

5. Install the Calmer rear auger bed bearing support in reverse order of step #4.



Installing Your Calmer Concaves

- 6. Remove all cover plates and MOG limiting inserts from all 3 Calmer concaves. Remove bolts holding concaves together and discard.**
- 7. Install Calmer Enhanced Flow Concave in position #3.**
 - a. Install mounting bolts on LH side and locking pin on RH side.**
- 8. Remove mounting bolts on concave #1 and remove this concave.**
- 9. Install Calmer Enhanced Flow concave with transition cone into position #1.**

a. Install mounting bolts on LH side and locking pin on RH side.



- 10. Level the concaves by following the step-by-step instructions found in your combine owner's manual.**

Installing Your Calmer Concaves (continued)

- 11. Install Calmer Enhanced Flow concave in position #2.**
 - a. If #2 concave doesn't fit between #1 & #3 concaves you may need to loosen the mounting bolts to slide concaves to accommodate each other.**
 - b. Install mounting bolts on LH side and locking pin on RH Side.**
 - c. Retighten all mounting bolts.**
- 12. Calmer Enhanced Flow concaves have now been successfully installed.**

Note: After installing your concaves reset your auger bed deflectors to recommended settings found on page 7 of the manual.



¼ Wrap Cover Plate and ¼ Wrap MOG Limiting Insert Installation:

Note: Cover plates and MOG Limiting Inserts are divided into Lefts and Rights. Lefts are painted yellow, and the mounting rails are spaced out wide. The rights are painted silver, and the mounting rails are spaced narrower.

- 1. Insert the pointed tabs of cover plates or inserts into the slotted receiver under the center of the concave.**
- 2. Push the top end of the cover plate/insert up toward the concave.**
- 3. Using the over center latch, clamp the cover plate/insert into place.
(you may need to adjust the tension of the latch to make sure it over centers securely)**
- 4. Install lynch pin into the latch handle to lock the latch.**
- 5. Install square wire lock pin to lock the cover plate/insert to the center rail of concave for added safety.**

Suggested Intial Settings

	Cover Plates MOG Limiters				Auger Bed Deflectors		Combine Settings				
Crop	LH	RH	LH	RH	LH	RH	Concave	Rotor	Fan	Chaff er	S ieve
Corn, Wet	None	None	None	None	1/2 way up	Full up	25	340- 500	1050- 1200	18- 22	18- 20
Corn, Dry	None	None	None	None	1/2 way up	Full up	25-30	290- 350	1050- 1100	18- 20	18- 20
Soybeans, Green Stem	#1	#1 & #2	#2-#6	#3 - #6	1/2 way up	Full up	10	580- 620	1050- 1100	12- 15	5-7
Soybeans, Dry	None	#1 & #2	All	#3 - #6	1/2 way up	Full up	10-15	550- 600	1050- 1100	18- 20	5-7
Wheat	None	#1	All	#2 -#6	1/2 way up	Full up	1-4	750- 800	950- 1000	10- 15	2-6
Wheat, Hard Threshing	#1	#1 & #2	#2-#6	#3 - #6	1/2 way up	Full up	1-4	750- 800	950- 1000	10- 15	2-6

Trouble Shooting

Our farmers who were involved with testing have created some simple troubleshooting solutions for common problems.

Crop	Problem	Cause	Solution
Soybeans, Wheat, Other Small Grains	Unthreshed pods in sample	Pods not retained long enough to thresh	Remove MOG limiters in the #1 concave and add more cover plates
	Rotor loss or damaged grain	Overthreshing	Remove cover plates in the #1 concave and add more MOG limiting inserts
	Seive loss/ excessive tailings	Overloaded cleaning system	Ensure all concaves have cover plates/ MOG limiters. Adjust auger bed deflectors to evenly distribute material to chaffer

Maintenance Record

This image shows a full page of white paper with horizontal grey ruling lines. The lines are evenly spaced and run across the width of the page, typical of notebook or legal stationery. There are no margins, text, or other markings on the page.

Maintenance Record

[illegible]

Maintenance Record

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



*"Thank you for purchasing Calmer
Products."*

Marion Calmer

CEO – Calmer

President – Calmer Ag Research Center

Owner/Operator – Calmer Farms



P.O. Box 9 | Alpha, IL 61413 | (309) 629-9000 | fax (309) 629-9001

www.CalmerCornHeads.com

*Trademarks are not owned by, affiliated with, or under license to Calmer and used solely for the utility of Calmer products mentioned herein.



Scan for Calmer® Legal Notice & Patents

**TO OBTAIN WARRANTY SERVICE:
CALL 309-629-9000**

**FOR EMERGENCY REPAIRS:
CALL 309-368-1182**

July 2026